

# Instruction Manual

Air ionizer

## [WINSTAT Model BF-X2ME]

Thank you for purchasing the WINSTAT BF-X2ME Fan-type Static Eliminator. Please read this manual before using the product in order to fully understand its functions. Also make sure to store this manual so that it can be referred to in the future.

### Warning

● This Product is not specified as an Explosion-proof Type. Do not use this unit at a location or an atmosphere, in which combustible gas or solvent is handled, or else ignition or explosion may occur.

### High Voltage

● A high voltage is applied to the Discharge Needle. Do not allow any conductive material, including your finger, any part of your body, wire or any tool to get close to the Needle, or an electrical shock accident or a malfunction of the product may occur.

## 1. Safety Precautions

### 1.1 Symbols on the main unit

The following table describes the symbols that can be displayed on the main unit.

	The apparatus is marked with this symbol when the user should refer to the instruction manual in order to protect against harm to the operator and to protect the apparatus against damage.
	Indicates dangerous voltages.

### 1.2 Safety

#### Installation

- Install the product in a location where the power indicator and output signals can be easily checked, and secure the space which can be operated.
- Do not install the product in any of the following locations, as doing so may cause fire or electrocution.
  - Locations subject to high temperature, or high or low humidity
  - Dusty locations
  - Locations where the air inlet of the fan will be blocked
  - Locations where the product may be exposed to organic solvents such as thinner
  - Locations subject to condensation
  - Locations where the product may be exposed to corrosive gas
  - Locations subject to flames or explosions
  - Locations subject to frequent vibrations
  - Locations subject to sudden changes in temperature or humidity
  - Locations where the product may be exposed to water or oil
- This product emits ozone into an atmosphere. Do not use this product in an enclosed space.

#### Power Supply

- Make sure to grasp the plug when removing the power cord. Pulling the power cord by the cord may cause it to break, or become damaged and have its core be exposed, which may cause a short circuit, or current leakage and electrocution.
- Make sure to insert the power cord firmly into the power socket. Failure to fully insert the power cord into the socket may cause fire or electrocution.
- Do not insert or remove the power cord with wet hands. Doing so may cause electrocution.
- Do not step on the power cord or place heavy objects on it. Doing so may cause damage to the cord.
- Make sure to use AC adapter included with the product.
- Do not use supplied or separately sold AC adapter for any other equipment.

#### Maintenance

- Periodically remove the power cord and wipe any dust on the power socket away with a dry cloth. If you leave the power cord inserted in the power socket for a long period in a location with high humidity, dust, or oil, the dust will absorb the humidity, etc., which may result in a short circuit, and cause a fire.
- Make sure to turn the main power of the product OFF before removing the power cord for cleaning.
- Use water (or a neutral detergent) when cleaning the filter or front louver. Also, add IPA(isopropyl alcohol) to the cloth when cleaning the discharge needles. Make sure the IPA has dried before re-inserting the power cord.

#### Handling

- Do not disassemble or modify the product.
- The product may affect medical devices such as hearing aids or pacemakers.
- Take care when using the product, as its internal parts are subject to high voltage.
- Do not insert any foreign objects into the product. Doing so may result in a short circuit or current leakage, and cause fire or electrocution.
- Make sure to connect the earth wire to an appropriate place. Forgetting to connect the earth wire, or connecting the earth wire to an inappropriate place may cause electrocution.
- For safety purposes, remove the power cable if you plan on not using the product for an extended period of time.
- If the product emits any abnormal odors or sounds, smoke, or heat, turn OFF the main power immediately, remove the power cord, and contact your point of purchase. Failure to do so may result in fire or a short circuit.
- Do not directly touch the discharge needles with your hands.
- Do not do anything with the product that is not described in this manual.

## 2. Outline

- This product uses a fan to blow air ionized with the corona discharge of an electrode to eliminate the static electricity in electrically charged materials that are located at a distance.
- The middle frequency corona discharge system enables a balanced amount of positive ions to be released for high neutralization performance. The performance of the product also deteriorates little with age, making it low maintenance.
- Includes output signals for abnormal high voltage and fan locked output (red indicator). When abnormal high voltage occurs in this product, it stops the high voltage output.
- The front louver can be easily removed/attached for easy electrode maintenance. This product also includes a safe circuit design that ensures that the high voltage output and fan stop when the louver is removed.
- The amount and angle of the air blowing from the fan is adjustable.


## 3. Specifications

### List of Specifications


Model No.	BF-X2ME
Power-supply voltage	Accessory AC adapter input: 100 V to 240V AC, 50/60Hz (Output: 24V DC)
Input voltage	24 V DC ± 10%
Capacity	12VA
High voltage output	±7,500 V <sub>eff</sub> approx.
Ion balance (NOTE1)	±3 V or less
Static charge removal time (NOTE1)	1 sec. approx.
Alarm Output (ALARM)	OFF if abnormal high voltage output or fan locked (red LED is lights up) normally ON MOS FET relay output maximum allowed current: 200 mA Applied voltage: 30 V DC or less
Airflow	1.4 to 3.5 m <sup>3</sup> /min
Air flow out angle	Vertically 360° variable
Quantity of produced ozone	0.004 ppm or less(at the center of the fan outlet [150 mm])
Ambient temperature	0 to 40°C
Ambient humidity	15 to 85% ( No condensation allowed )
Installation Environment	Indoor, Altitude up to 2000m, Over-voltage category II , Pollution degree 2 (IEC61010-1)
Dimensions: (mm)	150W×182H×76D (Main unit only)
Weight	1.0 kg approx. (including stand)
Material	Enclosure: ABS, Discharge needles: Tungsten, Stand: SECC
Accessories	Instruction manual, AC adapter, Wide-angle louver, Alarm output connection wire

Note1: Typical value at a distance of 300 mm from the center of the fan outlet, at maximum flow rate. (before shipment)

### Appearance

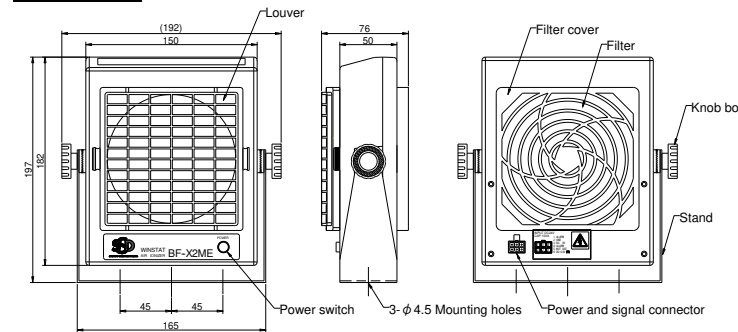

### ● Indication/ Function part name

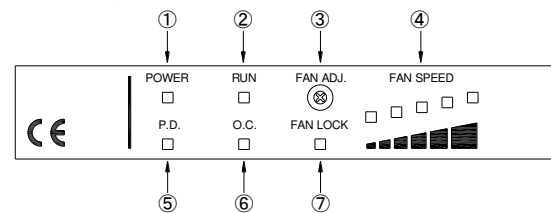


### ● Indication/ Function part description

No.	Name	Indication	type	description
①	Power supply indicator	POWER	green LED	Lights up when the power supply is turned ON.
②	Run indicator	RUN	green LED	Lights up when the product is operated.
③	Fan speed adjustment screw	FAN ADJ.	screw	To enable change of airflow at step-less adjustment possible
④	Fan speed indicator	FAN SPEED	green LED	The airflow can be indicated with the LED. [1 (weak) to 5 (strong)]
⑤	Pulse discharge detection indicator	P.D.	red LED	Lights up when an electrical discharge or a spark has occurred, and High-voltage output is halted.
⑥	Over Current detection indicator	O.C	red LED	Lights up when an over-current has occurred, and High-voltage output is halted.
⑦	Fan lock detection indicator	FAN LOCK	red LED	Lights up when the fan is not in the normal operating status.

Note2: When P.D. or O.C. detection indicator is lights up, press the Power switch to cancel abnormal status. But if the abnormal condition has not been removed, the abnormal status will occur again.

## 4. I/O Circuit Diagram

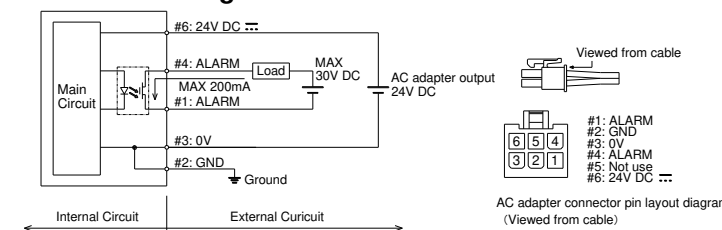

Note1: GND(#2) is connected internally to 0V(#3) and louver.


Note2: The 24VDC, 0V and GND wire are connected to the connector of the AC adapter before shipment.

Note3: If the Output Signals are to be used, connect the wires (Accessories) to the connector of the AC adapter.

## 5. Installation

- Be sure to turn OFF the power before installing the product.

- Place the product on a level surface. If you want to fix the product to the surface, use the screws already inside the holes, and make sure the product is secured firmly before using it.

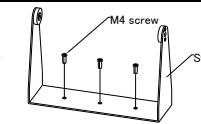

- The angle of the main unit may be freely adjusted by loosening the Knob Bolt. After the adjustment is completed, be sure to tighten the Knob Bolt again to ensure that the angle of the main unit will stay unchanged.

## 6. Wiring

### Caution

- Be sure to carry out the grounding procedure (according to the class D procedure). Otherwise, an electric shock accident or a malfunction of the product may occur. In addition, this product may not be able to work up to the full performance.
- Output signals do not incorporate a short-circuit protection circuit. Do not connect the power supply or capacity load directly. Otherwise internal circuit is damaged, and accidents or problems with operation may occur.

### Connection the main unit

- Connect the Grounding Lead "green" Wire attached from the output connector of the AC adapter to the Grounding Point. If it is not securely grounded, the Product may not be able to work up to the fullest performance.
- If the Alarm Output Signals are to be used, connect the "white" and "yellow" wires (Accessories) to the output connector of the AC adapter. No polarity is involved with the connections in this case. If no Alarm Output Signals are to be used, these wires do not have to be connected to the connector of the AC adapter.
- Insert the 24VDC output connector of the AC adapter into the power supply signal connector on the backside of the main unit.

### Connection the AC adapter

- Insert the power plug of the AC adapter in an AC (100 to 240V) power outlet.
- Make sure to use the AC adapter included with the product. (INPUT: 100 V to 240 V 50/60 Hz, OUTPUT: 24 V DC)

## 7. Operation

- Turn the power switch of the product ON, and green POWER LED becomes light up. The electrode becomes charged with high voltage, releases corona discharge, and generates neutralizing ions. At the same time, the fans spin, and blow neutralizing air from the front of the main unit. Charged materials placed in the neutralizing air will be immediately neutralized.
- In accordance with the distance to the charged object, adjust the Fan speed adjustment screw to provide the appropriate amount of airflow. Turn the Fan speed adjustment screw gradually with phillips screwdriver.
- The operating status is displayed on the front monitor panel. In a normal operating state, only the green RUN LED lights up. If the fan stops, the red FAN LOCK LED lights up, and if there is a high voltage output irregularity, the red P.D. LED or O.C. LED lights up.
- Press the Power switch OFF to stop the product.

## 8. Indicator and Alarm output

	LED state					Alarm output
	POWER [green]	RUN [green]	P.D [red]	O.C [red]	FAN LOCK [red]	
Normally	○	○				CLOSE
Pulse discharge	○		○			OPEN
Over current	○			○		OPEN
Fan lock	○	○			○	OPEN
Power OFF						OPEN


## 9. Maintenance

### Warning

- Before care and maintenance of the product, make sure to turn OFF the power and the fan has stopped completely. Otherwise damage or operating problems may occur.
- The tip of the discharge needle is sharp, be careful not to touch the Discharge Needle.
- When the product is used for long periods of time, the discharge needle and the air inlet/ outlet section will get dirty. Clean the discharge needle and the air inlet/ outlet section regularly, otherwise you could not get the desired effect, and operating errors and accidents may occur.
- The maintenance required depends on the environment of use. As a reference, cleaning both the discharge needle unit and fan filter should be done once 2,000 hours.
- Discharge needle is not required for replacement due to natural abrasion. Please replace the discharge needle unit only if discharge needle was broken or bent, or stain was not removed by cleaning.
- If you use the discharge needle unit or fan filter for replacement mentioned, please purchase below.
  - DNU-W85 : Discharge needle unit
  - OBF-F2MA-1-10: Fan filter (10 pcs.)


### Cleaning the Front Louver

- Push in the tabs on both sides of the front louver, and pull it towards yourself to remove it from the main unit. Clean the louver using the cotton swab etc. If the louver is extremely dirty, wash it with water (or a neutral detergent).
- Re-attach the front louver to the main unit after drying it thoroughly.

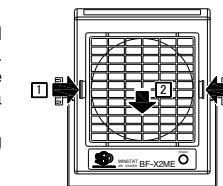


### Cleaning the Discharge needles

- Remove the front louver.
- Clean the discharge needles using the cotton swab etc. If the discharge needles are extremely dirty, it is recommended you add IPA (isopropyl alcohol) to it.

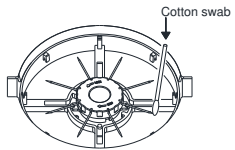


### Replacing the Discharge needle unit

- Remove the front louver.
- While securely holding down the main unit in place, remove the discharge needle unit by gripping the Finger Grip at the center of the discharge needle unit and turning it in the direction of FREE (clockwise), and releasing the unit.

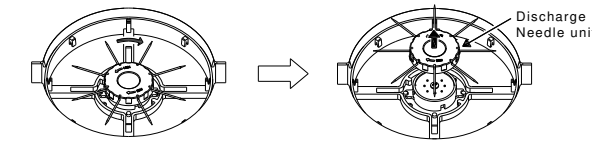

- Prepare a new set of discharge needle unit.
- Align the protrusion on the main unit in the section to be engaged with the discharge needle unit with the engaging section on the discharge needle unit. Press the discharge needle unit into the main unit, so that both units will be engaged with each other. Turn the discharge needle unit in the LOCK direction (counterclockwise) until the discharge needle unit is securely locked with the main unit.

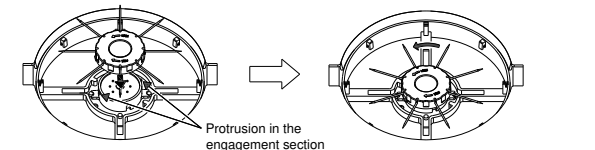

Note1: Turn the discharge needle unit until securely locked. The correct installation of the discharge needle unit on the main unit is essential for the optimum operation of the Product.

### Cleaning the Filter

- Check that the power is turned off.
- While securely holding down the main unit in position, remove the filter cover. The filter cover may be easily removed by gripping the side of the filter cover and pulling it toward you.
- Clean the soiled or clogged the filter. If the filter is extremely dirty, wash it with water (or a neutral detergent), and drying it thoroughly.
- Re-attach the filter to the main unit.

## 10. Troubleshooting

Problem	Main case	Remedy
The power cannot be supplied to the product.	AC adapter not connected	Check to see if the AC plug is securely inserted into the wall outlet.
	Louver not installed	Check the Louver to confirm that it is correctly installed.
P.D. LED (red LED) lights up.	Abnormal discharge	Check that the discharge needle is free from conductive materials.
		P.D. LED remains light even after the discharge needle has been cleaned, clean the area around the needle is dirty.
O.C. LED (red LED) lights up.	Internal circuit is broken	Check that the discharge needle unit to confirm that it is correctly installed.
		Turn off the power, and then turn the power back on. If the ionizer still is not recovered, inform to a nearby sales office.
FAN LOCK LED (red LED) lights up	Fan in broken	Check the filter is not dirty or blocked.
	Foreign objects	Check no foreign objects inside the product.

## Letter of Guarantee

- This product has passed the inspection carried out by our company. This product will be subject to repair or replacement, free of charge, of any failed or broken part, if a failure or a breakage should occur during the guarantee period under the condition of normal use, caused by a defect in the design or manufacture by our company.
- The Period of Guarantee: One (1) year starting from the date of delivery.
- Any repair work or replacement for any failure or breakage caused by any of the following reasons will be carried out by the user bearing the cost:
  - (1) Any failure or breakage caused by usage or storage not under the normal condition.
  - (2) Any failure or breakage caused by an unauthorized repair or a modification carried out by other person than our company, or not in accordance with the specifications provided by our company.
  - (3) Any failure or breakage caused by a disaster or force majeure such as fire, natural calamity, or an act of God.
  - (4) Any failure or breakage caused by any other reason that cannot be attributable to our company.

Product Name	Air Ionizer (Fan type Ionizer)	Model Name	WINSTAT Model BF-X2ME
Serial Number		Date of Delivery	Inspection Seal



Static Clean International.

(877) 782-8423 techsales@staticclean.com

www.staticclean.com